

Wiring Colors

English Order		Italian Order	
Black	Nero	Arancio	Orange
Blue	Azzurro	Argento	Silver
Blue	Blu	Azzurro	Blue
Brown	Bruno	Bianco	White
Brown	Marrone	Blu	Blue
Clear	Puro	Bruno	Brown
Gray	Gregio	Concia	Tan
Green	Verde	Giallo	Yellow
Orange	Arancio	Gregio	Gray
Pink	Rosa	Marrone	Brown
Purple	Porporina	Nero	Black
Red	Rosso	Nocciola	Tan
Silver	Argento	Porporina	Purple
Tan	Concia	Puro	Clear
Tan	Nocciola	Rosa	Pink
Violet	Viola	Rosso	Red
White	Bianco	Verde	Green
Yellow	Giallo	Viola	Violet
Light	Chiaro		
Dark	Scuro		

330 GT Series 1 Fuse Information


Amp Bottom/Right Hand Fuses	Amp Top/Left Hand Fuses
8 R High Beam	8 Ignition
8 L High Beam	30 Starter
8 R Low Beam	30 Horn, Lighter, Auxiliaries
8 L Low Beam	Regulator, Instruments, Fan, O/D
Lights: Side, License, Engine, Trunk, Reverse	Wipers, Fuel Pump, Facia Lights, Aux.
Fog and Courtesy Lights	15 Stop & Direction Lights, A/C

330 GT Series 2 Fuse Information

Amp Bottom/ Right Hand Fuses (#25)	Amp Top/ Left Hand Fuses (#26)
8 R High Beam	8 Ignition
8 L High Beam	30 Cooling Fans & Instruments
8 R Low Beam	15 Wipers, Washer, Handbrake Light
8 L Low Beam	8 Regulator
8 Lights: Parking, Reverse, Engine, Panel, Fog	30 Horn, Lighter, Clock, Acc. Plug
30 Starter	8 Interior and Trunk Lights
15 Heater Fans, A/C, Glove Box	15 R Window
15 Stop Lights, Defroster, Fuel Pump	15 L Window

LEGEND FOR WIRING DIAGRAM – SERIES 1


- | | | | | | |
|-------|-----------------------------------|-------|---|-------|---------------------------------------|
| 1. | Headlights | 28. | Glove compartment light switch | 52. | Overdrive control switch in gearbox |
| 1-a. | High beam telltale lamp | 29. | Glove compartment light | 53. | L/H door switch for inside lights |
| 2. | Low beams | 30. | Relay for direction indicator | 54. | Inside lighting lamps |
| 3. | Parking lights & front indicators | 31. | Overdrive solenoid | 55. | R/H door switch for inside lights |
| 4. | Alternator | 32. | Overdrive control relay | 56. | L/H window regulator electric motor |
| 5. | Starter | 33. | Stop light hydraulic switch | 57. | L/H window regulator switch |
| 6. | Battery | 34. | Fuel pump switch | 58. | R/H window regulator electric motor |
| 7. | Horns | 35. | Cigar lighter | 59. | R/H window regulator switch |
| 8. | Horn relay | 35-l. | Cigar lighter lamp | 60. | Fuel level gauge float |
| 9. | Ignition coils | 36. | Outside lighting commutator | 61. | Rear turn indicator |
| 10. | Distributor | 37. | Inside lighting switch | 62. | Rear parking light |
| 11. | Spark plugs | 38. | Defroster switch | 63. | Reverse light |
| 12. | Engine compartment light | 39. | R/H Fan switch | 64. | L/H trunk light switch |
| 13. | Panel | 40. | L/H Fan switch | 65. | L/H trunk light |
| 14. | Protection fuses | 41. | Oil temperature gauge | 66. | R/H trunk light |
| 15. | Voltage regulator | 42. | Oil pressure gauge | 67. | R/H trunk light switch |
| 16. | Fuse box | 43. | Overdrive control switch below steering wheel | 68. | Switch for lowering radio antenna |
| 17. | Windscreen wiper motor two-speed | 44. | Switch for direction indicator & head lights | 69. | Switch for raising radio antenna |
| 18. | Switch for wiper motor | 45. | Ignition control switch | 70. | Fuse for radio |
| 19. | Pedal push button for wiper motor | 46. | Horn push button | 71. | Radio |
| 20. | Panel lights | 47. | L/H heater fan | 72. | Antenna motor |
| 21. | Rheostat for panel lights | 48. | R/H heater fan | 73. | Antenna |
| 22. | Fan thermo switch | 49. | Defroster | 74. | Side flasher lamp |
| 23. | Radiator fan | 49-l. | Defroster telltale lamp | 74-1. | Turn signal lamps |
| 24. | Fuel gauge | 50. | Electric fuel pump | 75. | Green telltale lamp for side lamps |
| 24-l. | Fuel low lamp | 50-l. | Fuel pump telltale lamp | 76. | Oil temperature gauge telltale lamp |
| 25. | Electric clock | 51. | Front light switch & reverse | 77. | Water temperature gauge telltale lamp |
| 26. | Ammeter | | | | |
| 27. | Water temperature gauge | | | | |

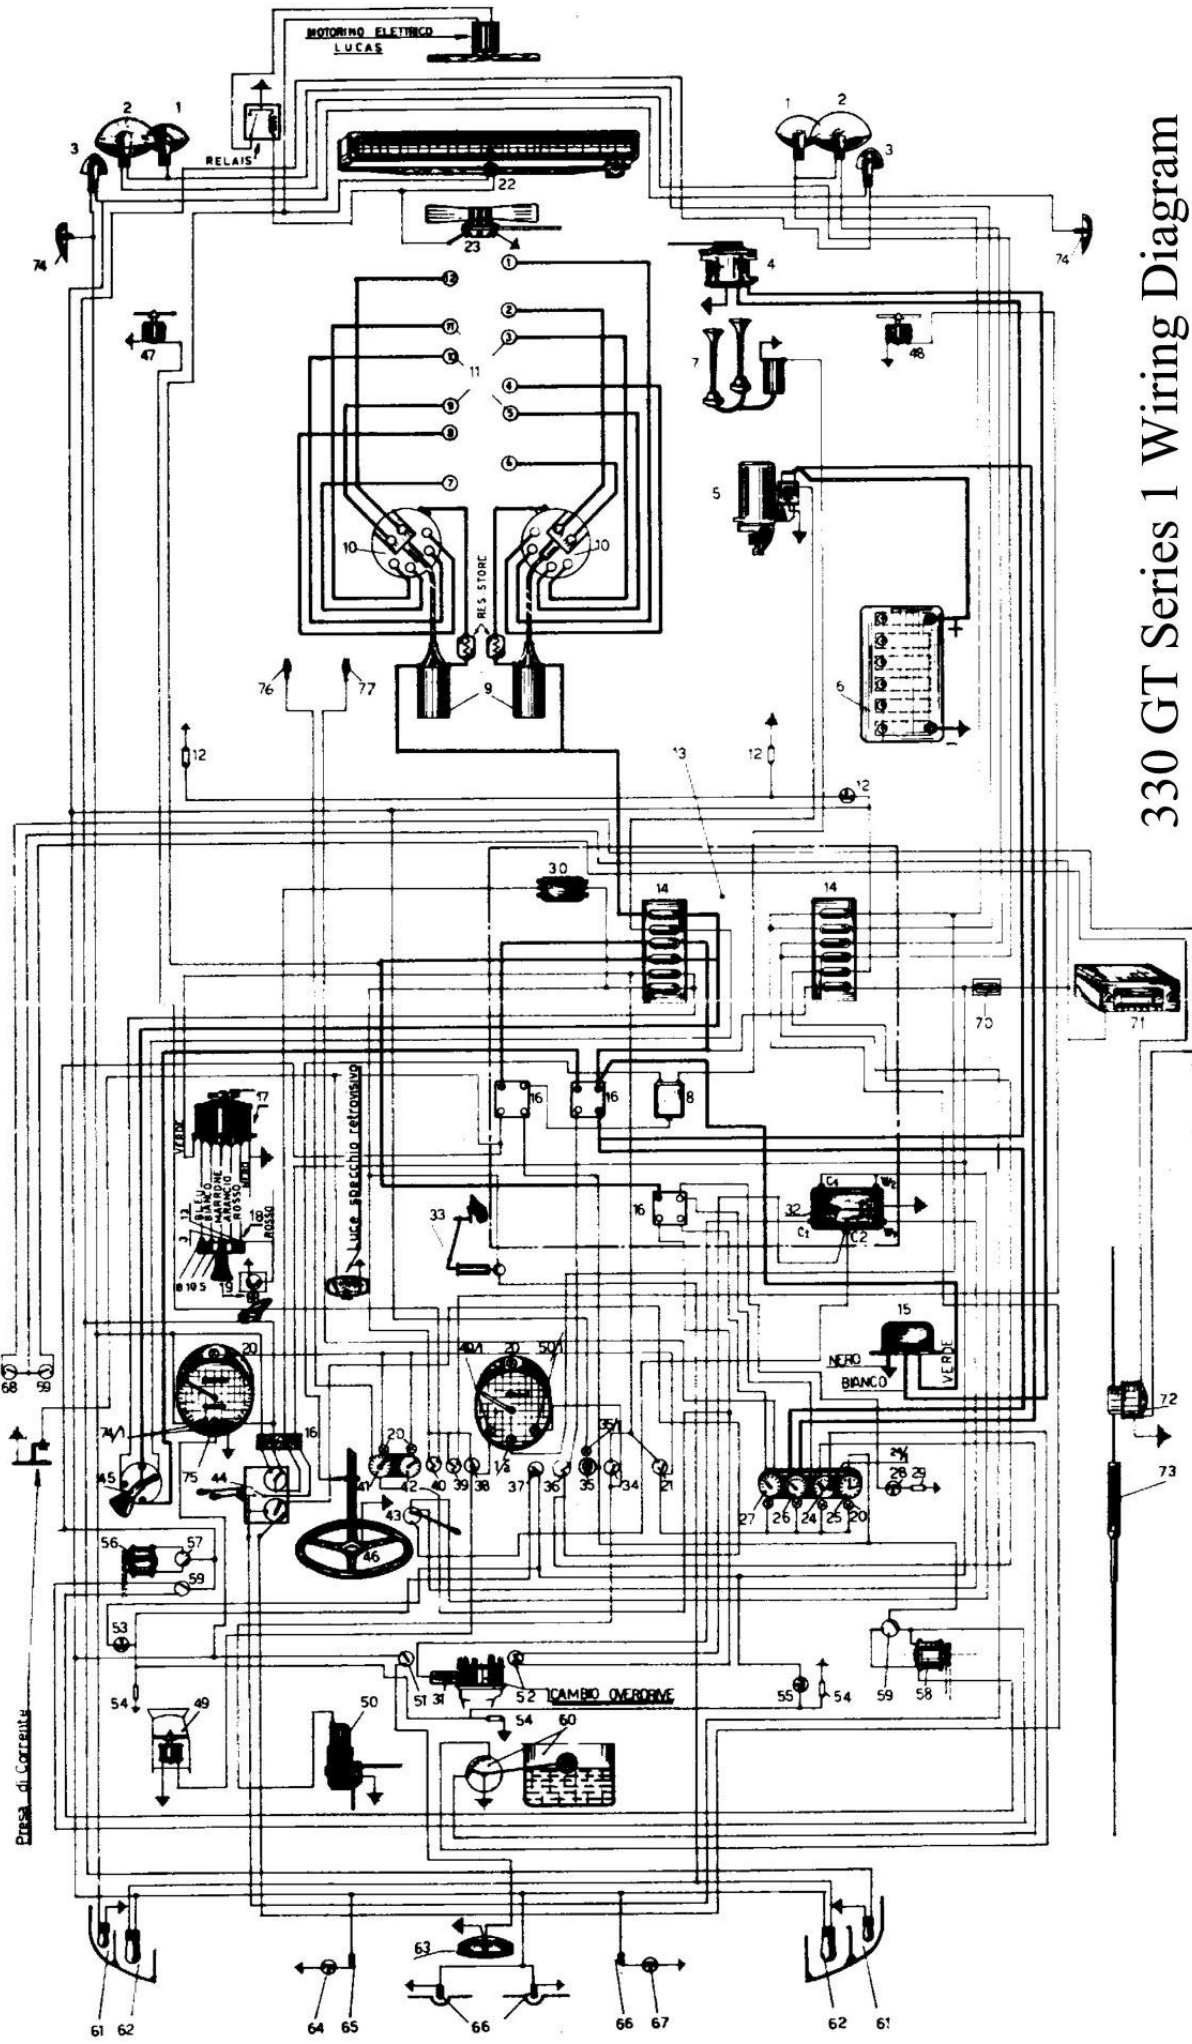

330 GT Series 1 Wiring Diagram

LEGEND FOR WIRING DIAGRAM – SERIES 2

- | | | | | | |
|-----|---|-----|--|-------|---------------------------------------|
| 1. | Headlamps and dip | 24. | Switch board | 52. | Main beam warning light |
| 2. | Front & tail lamps | 25. | Eight fuse box | 53. | Electric fuel pump warning light |
| 3. | L/H front directional Indicator | 26. | Eight fuse box | 54. | Front & tail lamps warning light |
| 4. | R/H front directional indicator | 27. | Relay for circuits under ignition switch | 55. | Rheostat for instrument lighting |
| 5. | R/H front side directional Indicator | 28. | Terminal box | 56. | Cigar lighter |
| 6. | L/H front side directional lights indicator | 29. | Air conditioning relay (when fitted) | 56-1. | Rear ash tray switch & light |
| 7. | Fog lights (when fitted) | 30. | Relay for radiator electric fans | 57. | Front & tail lamps switch |
| 8. | Radiator electric fans switch | 31. | Horn relay | 58. | Electric fuel pump switch |
| 9. | Thermostatic switch for radiator electric fans | 32. | Intermittent switch for directional indicators | 59. | Switch for L/H fan |
| 10. | Alternator | 33. | Double terminal board for indirect current | 60. | Switch for R/H fan |
| 11. | Horn | 34. | Battery charging regulator | 61. | Rear defroster switch |
| 12. | Starter motor | 35. | Fog lights switch (when fitted) | 62. | Interior light switch |
| 13. | Battery | 36. | Stop lights switch | 63. | Service switchboard |
| 14. | Electric fan for ventilation of passenger compartment | 37. | Windscreen wiper motor | 64. | Air conditioning (when fitted) |
| 15. | Ignition coils | 38. | Wind-screen washer motor | 65. | Glove box compartment lights |
| 16. | Resistance coils | 39. | Accessory outlet | 66. | Interior light switch |
| 17. | Ignition distributors | 40. | Electric motor for aerial (when fitted) | 67. | Motor for window regulator & switches |
| 18. | Spark plugs | 41. | Radio (when fitted) | 68. | Flasher for handbrake light |
| 19. | Electric fan for ventilator of passenger compartment | 42. | Fuse for radio | 69. | Switch for handbrake light |
| 20. | Engine compartment light switch & lights | 43. | Speedometer | 70. | Reverse light switch |
| 21. | Water temperature gauge switch | 44. | Switch for direction and head lights | 71. | Electric fuel pump |
| 22. | Oil temperature gauge switch | 45. | Rheostat for instrument lights | 72. | Rear defroster resistance |
| 23. | Compressor for air conditioning (when fitted) | 46. | Directional indicator warning lights | 73. | Trunk compartment light switch |
| | | 47. | Horn switch | 74. | Rheostat for fuel level gauge |
| | | 48. | Windscreen wiper/washer control | 75. | R/H rear directional indicator |
| | | 49. | Ignition switch & steering lock | 76. | L/H rear directional indicator |
| | | 50. | Revolution indicator | 77. | Front & tail lamps & stop lamps |
| | | 51. | Rear defroster warning light | 78. | Number plate lamps |
| | | | | 79. | Choke warning |

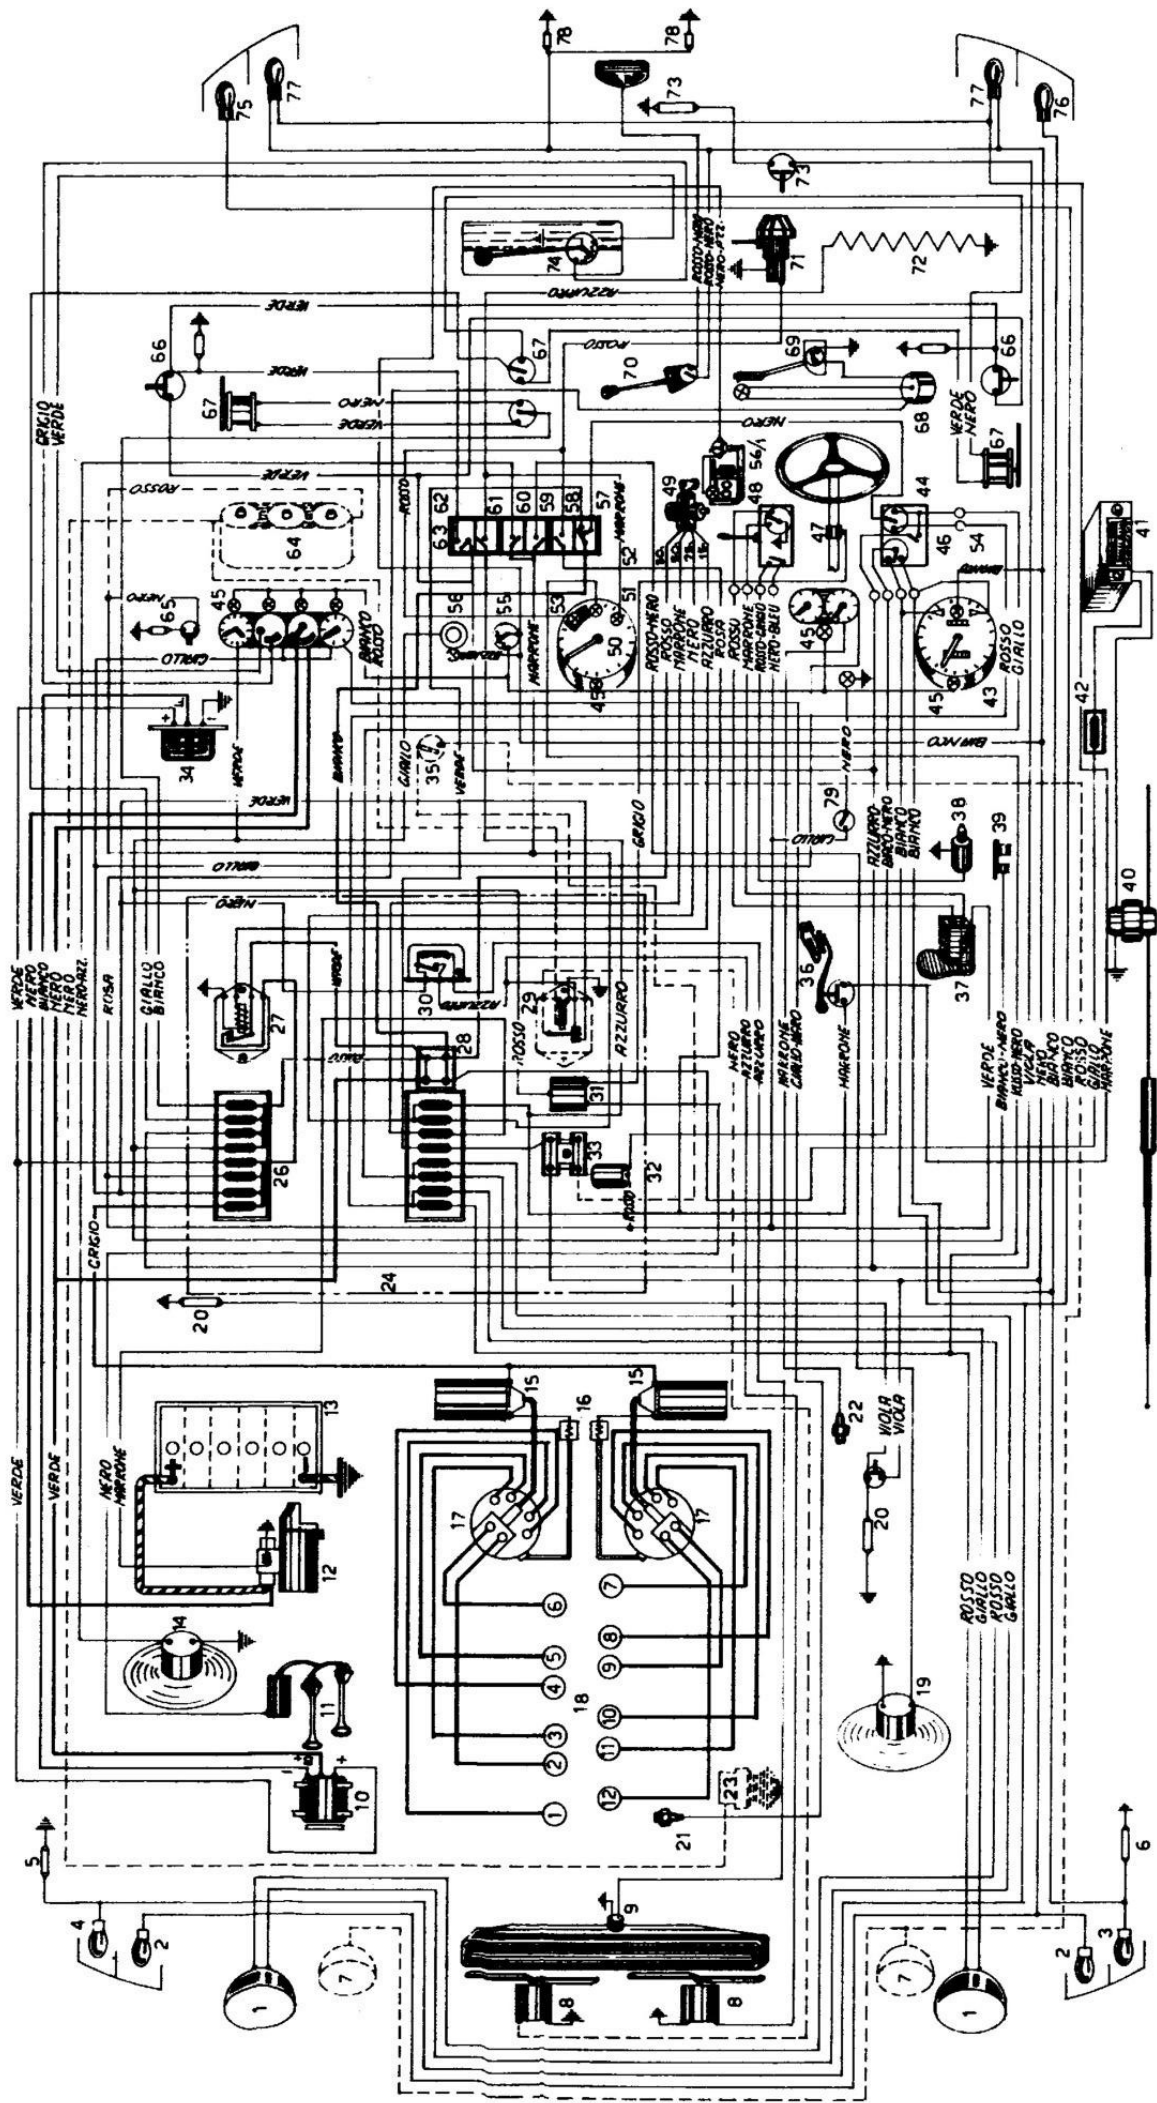

330 GT Series 2 Wiring Diagram